



RIPS Maintenance Instructions

Removable Units / Fixed Units

- Check millennium fittings are secure in the tracking.
- Check all nuts and bolts on base unit are in place and tight.
- Check that the two inertia belts in between the base legs pull out and retract. Check that the karabiner gate opens and closes.
- Check that the nuts and bolts securing the seat to the base are fully tightened.
- Check that the yellow spring loaded cushion latches are in place and functioning.
- Check that the two seatbelts in the back of the seat work and that the tongues click into the buckles.

King RIPS Units

- Check that unit locks and unlocks via the central handle.
- Check that the unit slides left to right.
- Check that the covers on the plate are in place.

Extending Back Units.

- Check that the back operates as it should i.e forwards and backwards when the red handle is operated.
- Check all the nuts and bolts on the connecting links that the back pivots on.