

SAFERIDER ARM



OPERATING INSTRUCTIONS:


Operating Instructions:

SAFERIDER ARM


Saferider Arm is shown in stowed position compactly positioned by vehicle wall.

Nb- nearside unit shown.

Explanation: **Pull plunger to unlock the headrest and at the same time lift it up.**

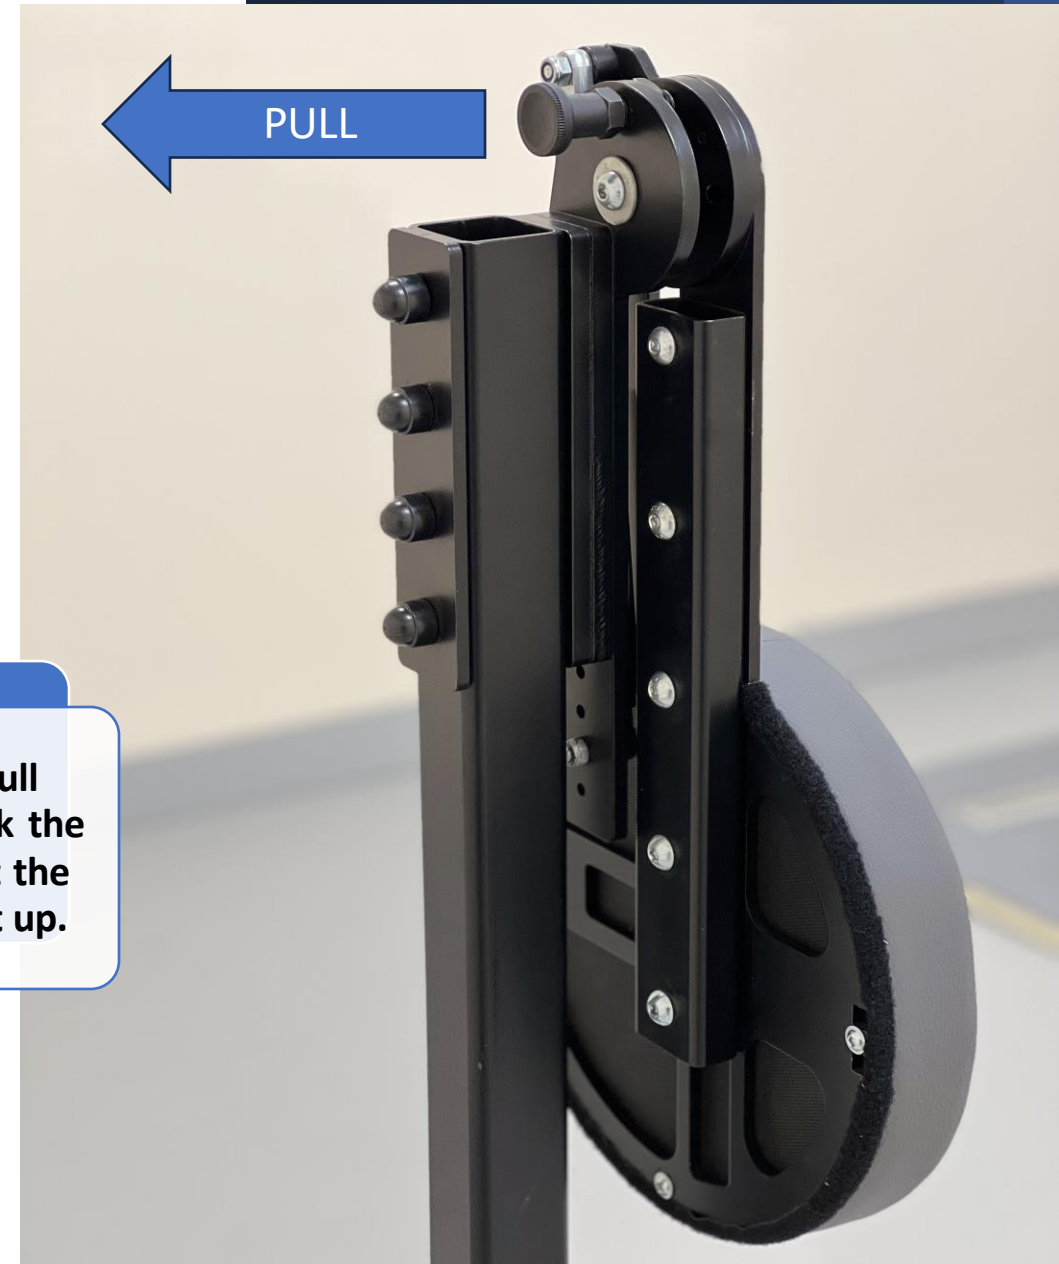

- Once you have started lifting the arm upwards, you can let go of the plunger.
- The arm will stop in the horizontal position and the plunger will lock in place.

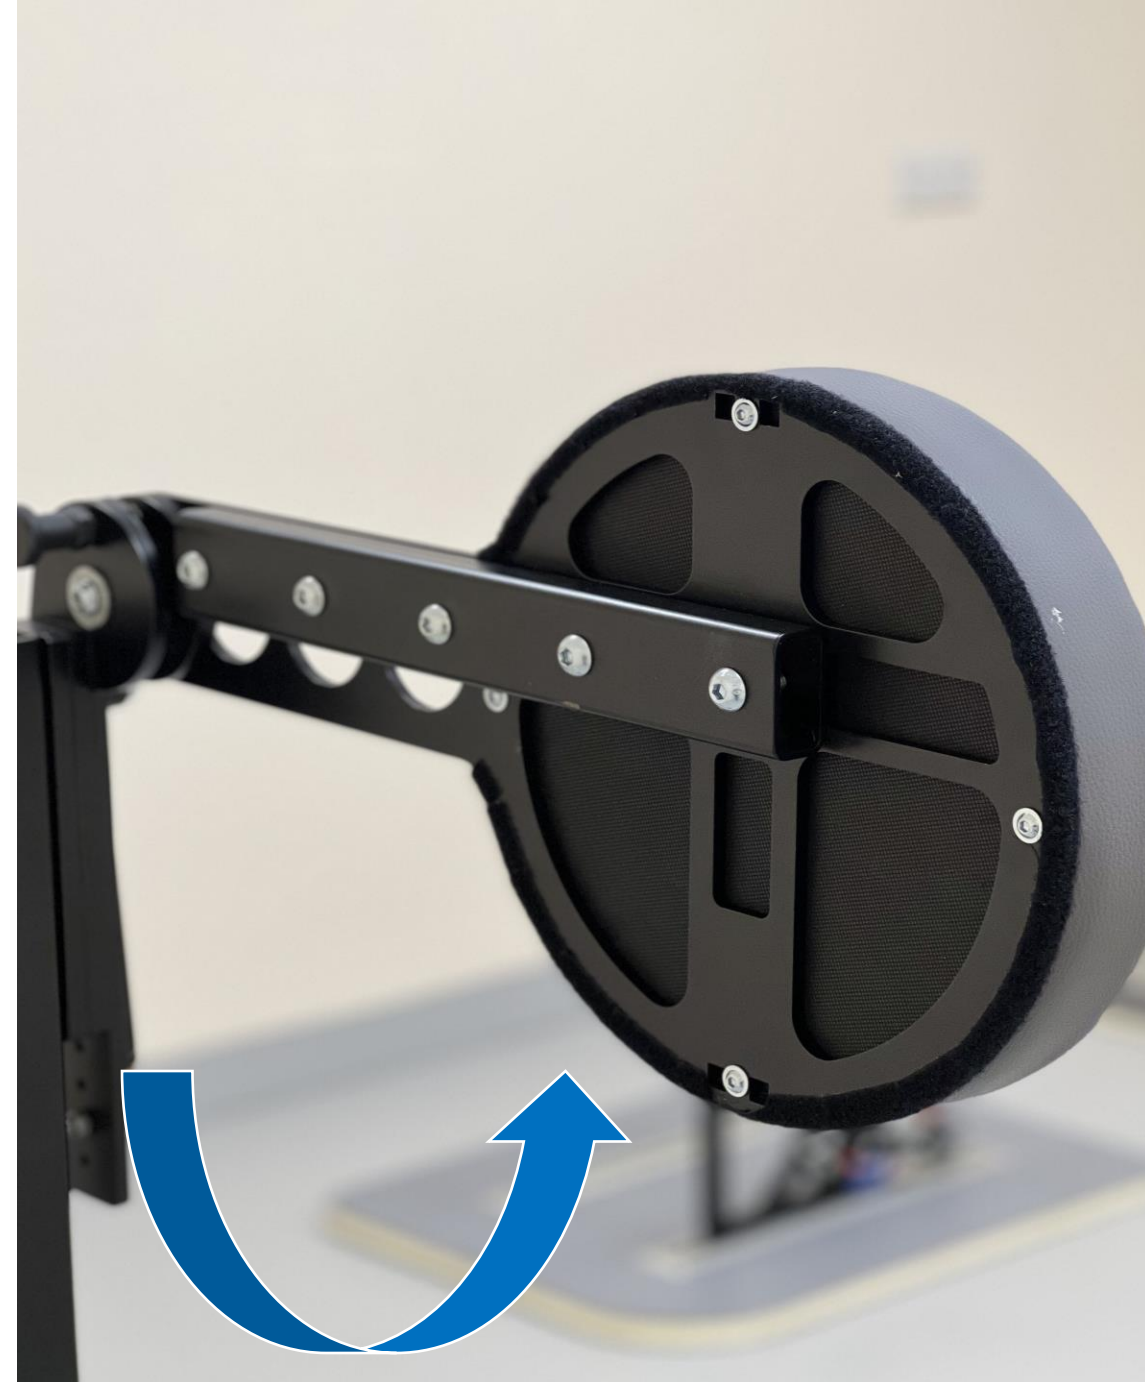

- The plunger will automatically click and lock in this position:



Operating instructions:

SAFERIDER ARM PLUS

- This Plus unit has x2 additional half-moon pads for greater headrest protection.



- To unlock and deploy both pads:
- Pull each lower plunger and move half-moon to the top and bottom of the round pad as shown.



Last Step:

- To fully deploy pads, pull the top plunger on each half moon pad and rotate downwards - you will hear the plunger lock into position.
-





nmi
Safety Systems

- NMI Safety Systems Ltd.
- 16 IO Centre, Arlington Business Park,
- Whittle Way, Stevenage, Herts SG1 2BD, Great Britain