



Instructions to fit Anti-Locking Component to RIPS (RIPS 105)

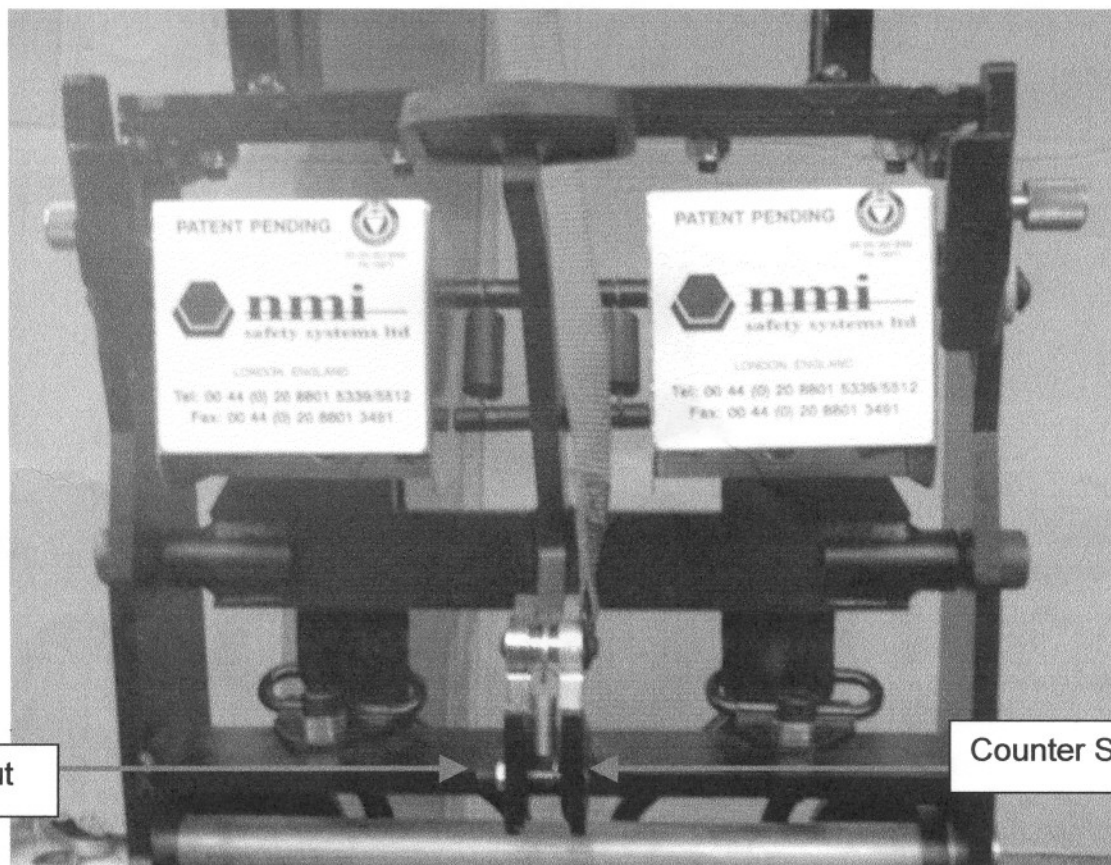

To Fit New Component follow the Steps Below:

Step 1: Use a spanner and allen key to un-fasten the above nut and bolt.

Step2 : Re-insert the bolt through the outer hole, through the spring, through the new component and out the furthest hole. Tighten nut and bolt using allen key and spanner. See picture below to see how modification should look.

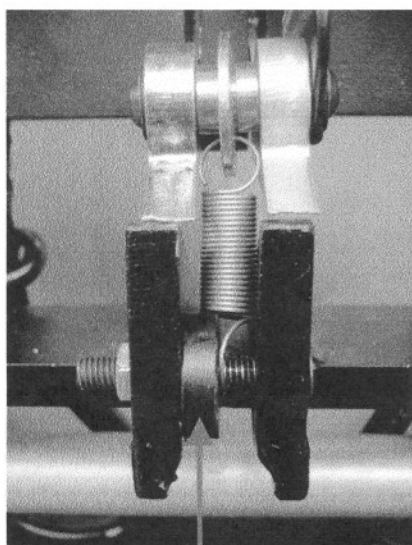

**Anti-locking Component
(RIP 104)**