



## **RKR SAFETY LOCK FITMENT** **INSTRUCTION**

Unlock the yellow handle at the top of the tube.

Remove the nuts from the sides of the tube frame to allow you detach the pedal spring. (This will allow the pedal to drop down and give easier working access)

Unscrew and remove the bolt located at the rear top of the tube.

(Figures 1 – 3 attached.)

Fit the yellow bracket using the same bolt as previously removed. Screw down tight.

Insert bolt ( ) from right hand side through the yellow bracket. Insert the spacer, and then slide on the yellow cam handle – with the handle facing the right hand side.

Insert the spring washer. Push the bolt through the yellow bracket and put the nyloc nut on the outside (left) of the yellow bracket.

Tighten the nut so that the handle can be moved up and down.

Reattach the pedal spring.

Check the lock is functioning correctly.

Make sure the dogs are fully engaged in the webbing drums.  
When the safety lock is fully down, it should stop the horseshoe (connecting the dogs) from lifting up. (figure 5)

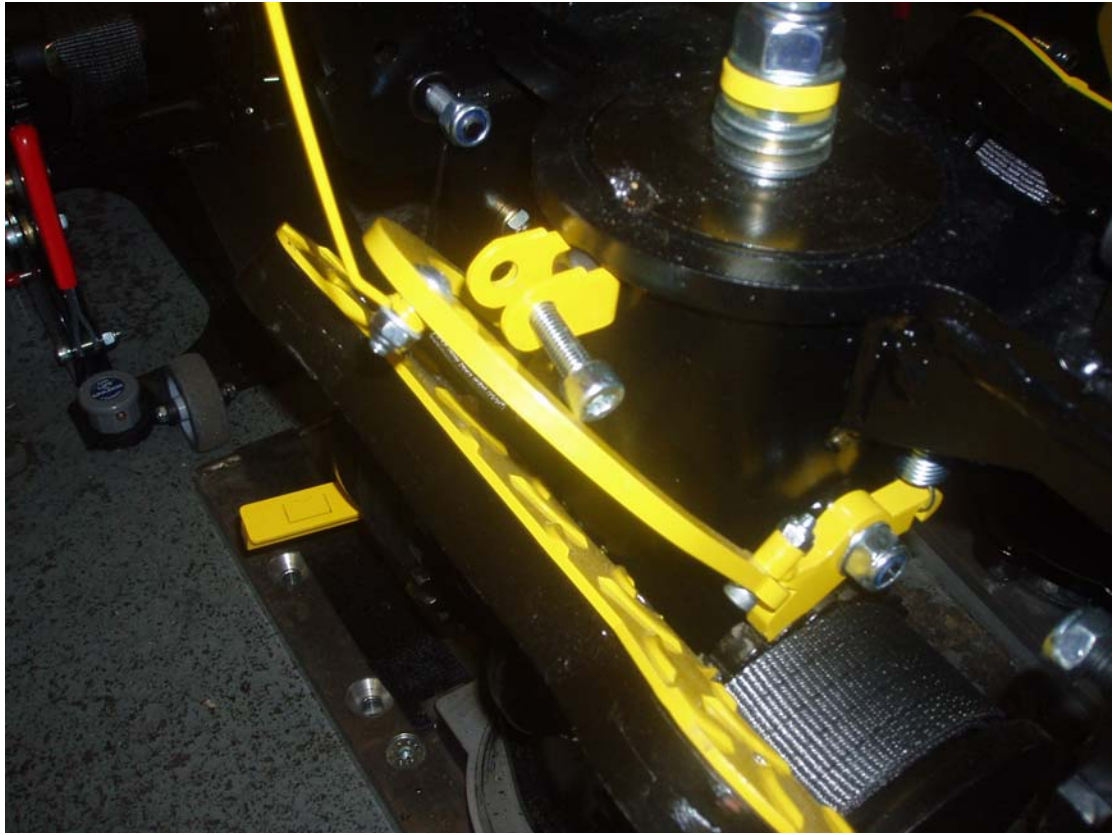


Figure 1

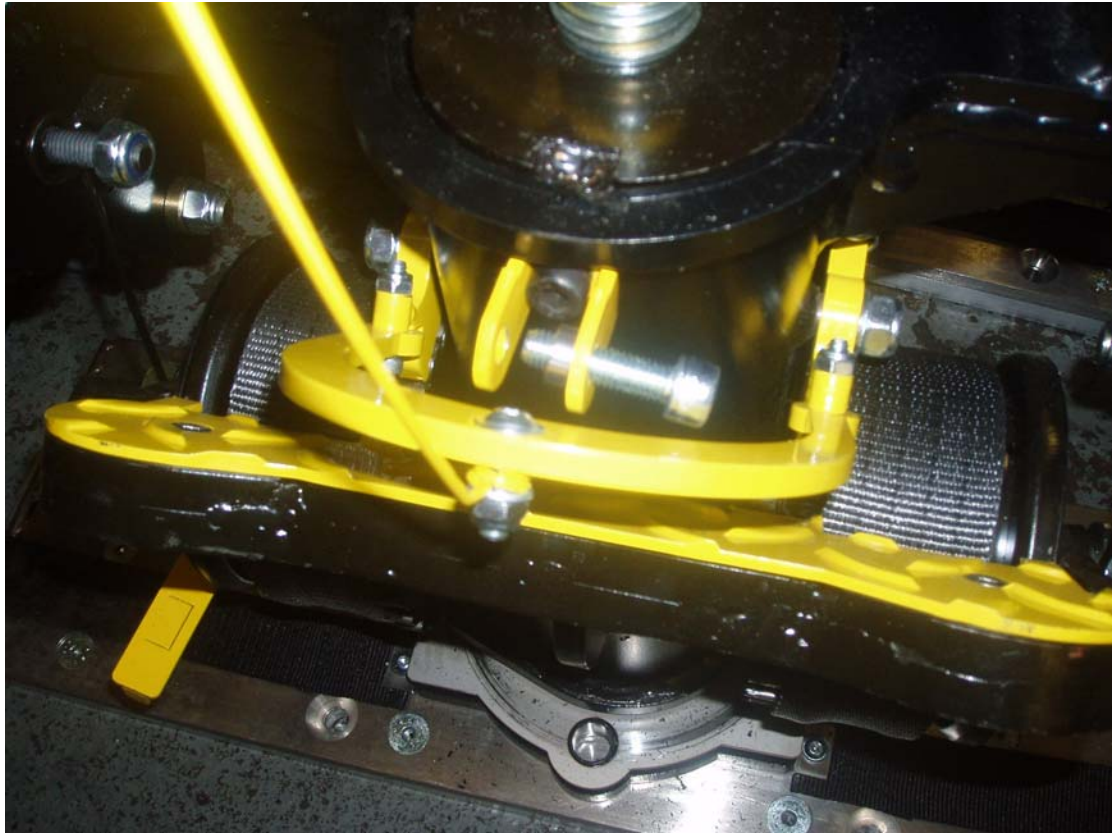


Figure 2

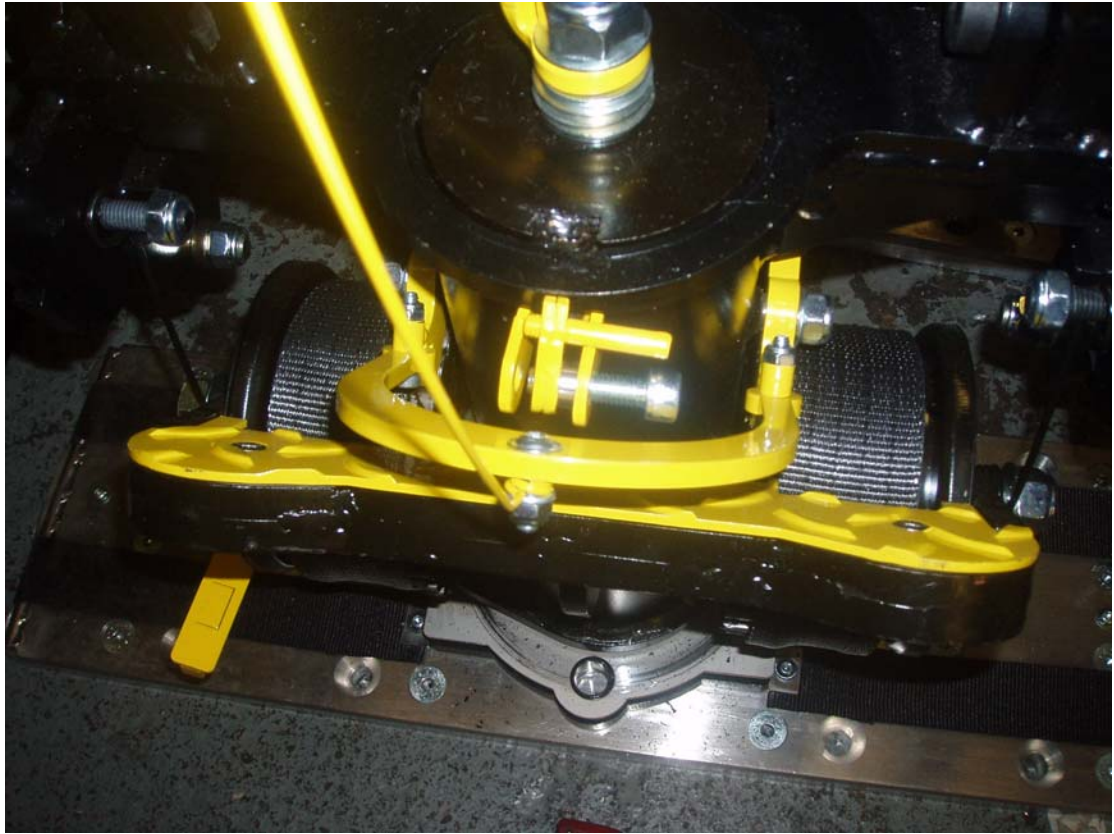
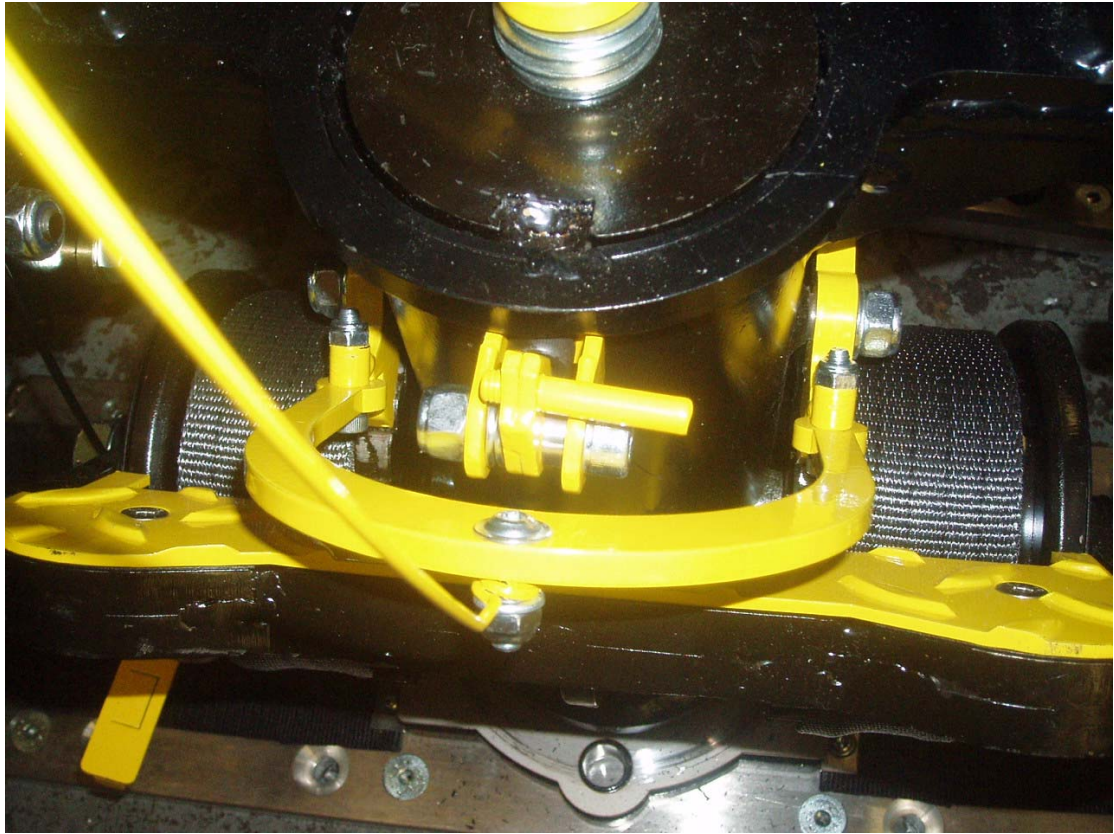


Figure 3



**Figure 4**

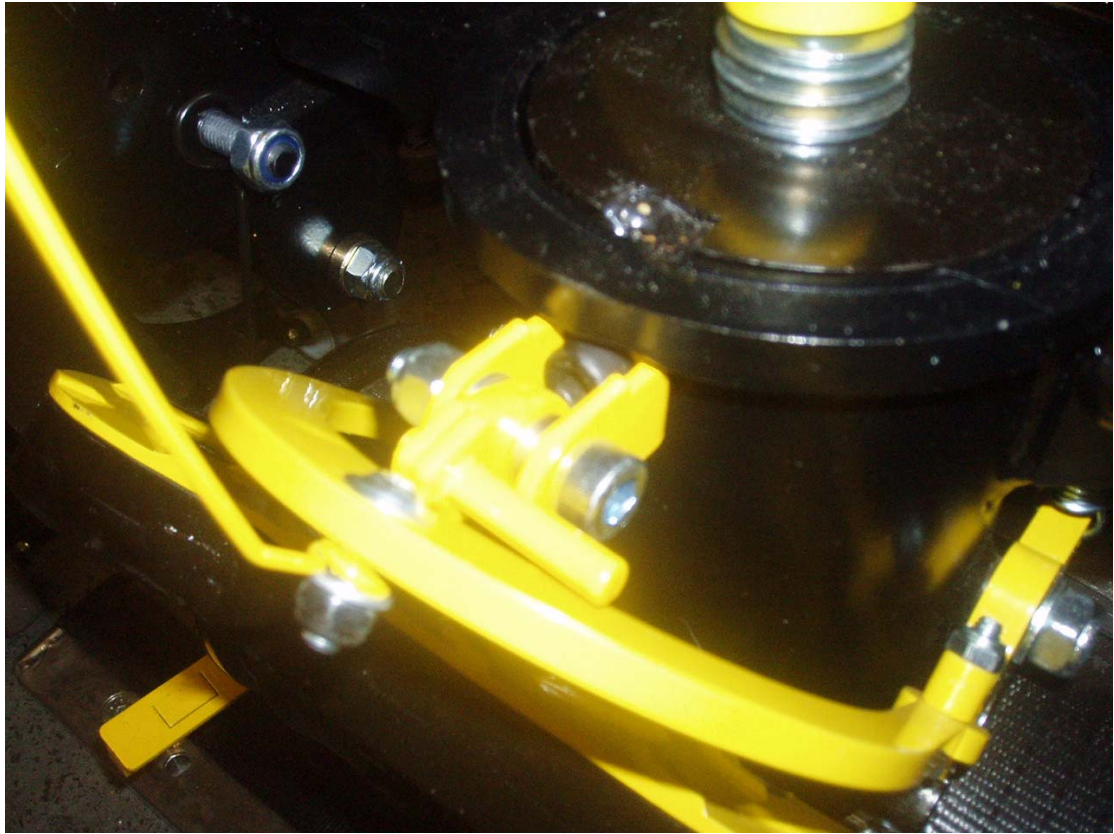


Figure 5

