


MSL/WHEEL FITTING GUIDE


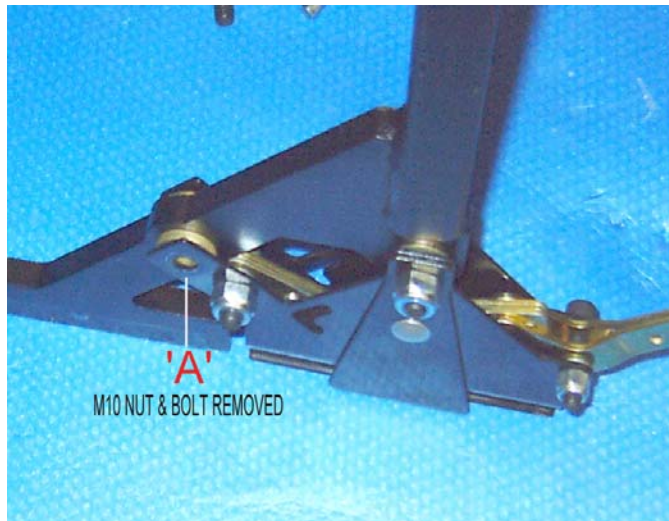


REMOVE THE M10 NUT & BOLT FROM 'A' ENSURING THE TWO GOLD SPACER WASHERS STAY IN PLACE

DISCARD M10 NUT & BOLT

**NOTE:
UNDER NO CIRCUMSTANCES SHOULD ANY OTHER NUT AND BOLT BE LOOSENED.**

REMOVE THE M10 NUT FROM THE WHEEL ASSY, ENSURING THE SPACER STAYS ON THE BOLT.

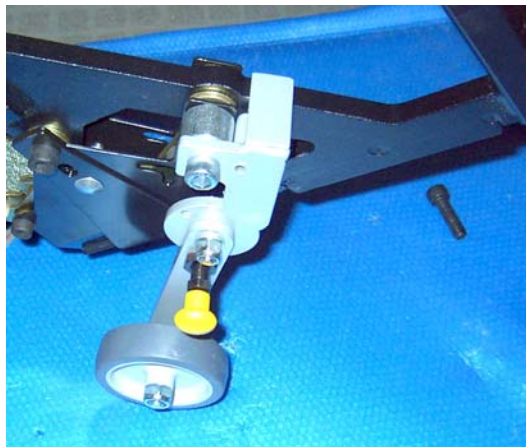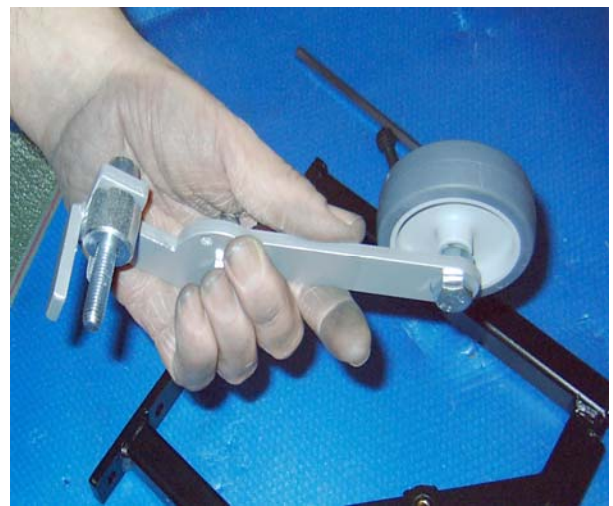

LOCATE THE ASSY INTO THE ORIGINAL 10MM HOLE IN THE MILLENNIUM FITTING. ENSURE THE ANTI-ROTATION PLATE IS LOCATED IN THE CORRECT POSITION ON THE LEG STRUT

ONCE THE WHEEL ASSY IS LOCATED TIGHTEN THE NEW M10 NUT SUPPLIED TO 55NM

