


NMI Maxi Capacity i6: User Instruction Leaflet


To be operated by trained personnel only. Ensure maintenance is carried out at regular intervals.

Turning seat space into wheelchair user space


1: Removing the seat bases

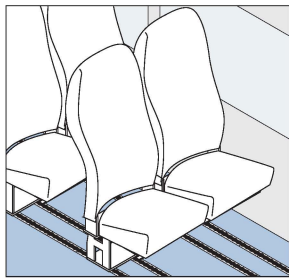


Locate the 4 NMI Maxi Capacity seats. They are recognisable as they will have a different base

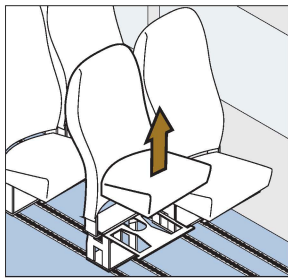


Lift the cushion from the seat frame by pulling firmly up on the front of the cushion. Do this on the 2 rear seats

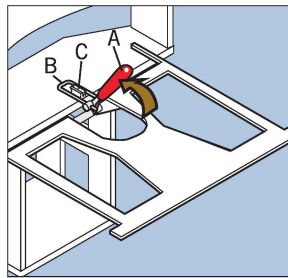

Rotate clamp handle A upwards to disengage hook B from catch C

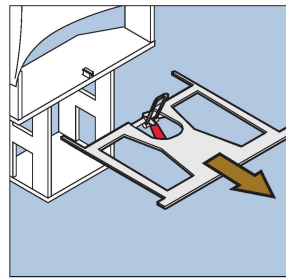


Slide the seat base out of the seat frame

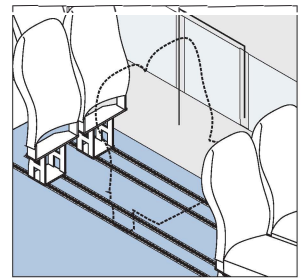


In between the Maxi Capacity seats is a double seat in tracking which must be removed to create space. - See separate sheet for removal instructions


2: Securing the wheelchair and user

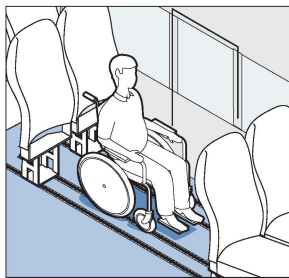


Now the wheelchair user can manoeuvre into the space provided in a central position between the seats

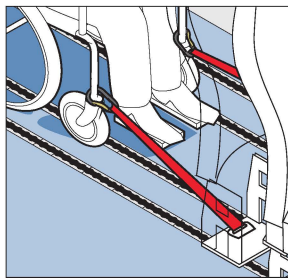


Attach the front karabiners to the front of the wheelchair frame as low as possible on the manufacturer's recommended points

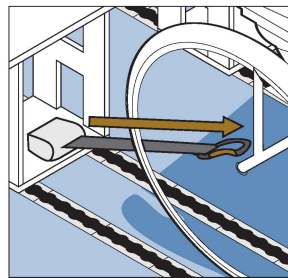


Extend the rear webbing retractor located on the rear seats

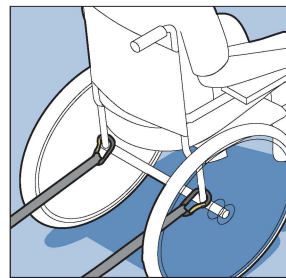

Attach the rear karabiners/hooks to the rear of the wheelchair frame as low as possible on manufacturer's recommended points

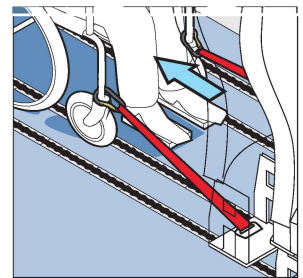


Reverse the wheelchair gently until the webbing at the front of the wheelchair is in tension and the rear retractor webbing belts are also tensioned. Put on the wheelchair brakes

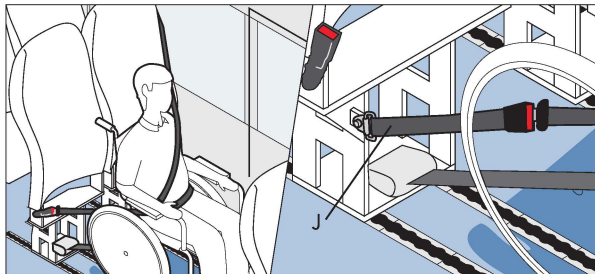


To secure the wheelchair user pull seat belt from window seat, overlap the passenger's shoulder and waist and insert into the seatbelt buckle on the aisle seat...

...It may be necessary to use an extension belt which is located on the underside of the aisle side rear seat


Turning wheelchair user space into a seat area

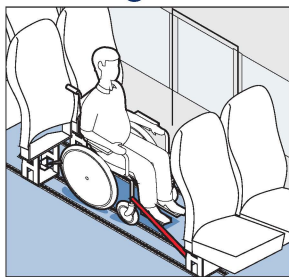


Take off passenger seat belt

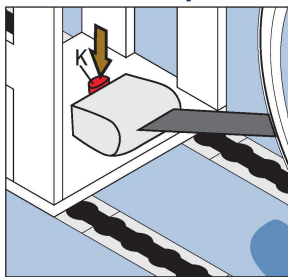

To release the webbing press on the lever K located on the webbing retractor and pull webbing to release the tension

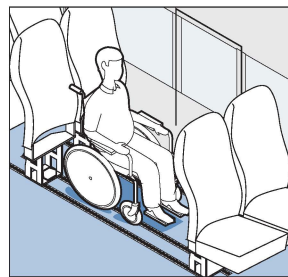

Remove the webbing and release the wheelchair brake, the wheelchair user can now leave the space via the side entry lift

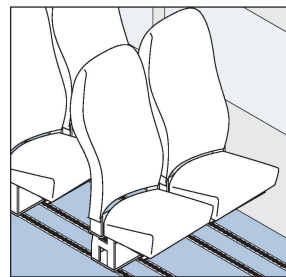

To return the seats to their original position implement the steps in reverse starting with the last step in section 1 at the top of this page. Note floor track marks for correct seat position