


NMI Millennium Fitting Smart Legs with Wheelie Wheels: User Instruction Leaflet


To be operated by trained personnel only

Installing a seat with Millennium Fitting and Wheelie Wheels


Positioning the seat, preparing the fittings, inserting them into the tracking, adjusting positioning and securing

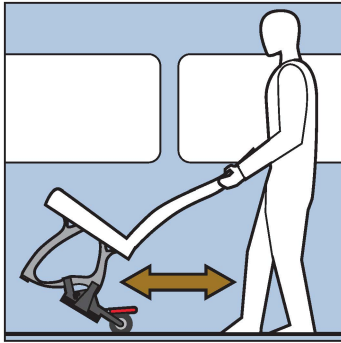


Transport seats by tilting the seats back to utilise the Millennium Wheelie Wheels

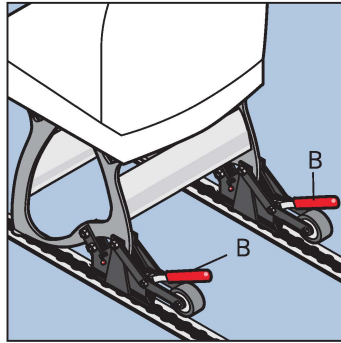


Rest on tracking and ensure handles B are unlocked by pointing away from the chair as shown above. If not please unlock them using the instructions in the next section

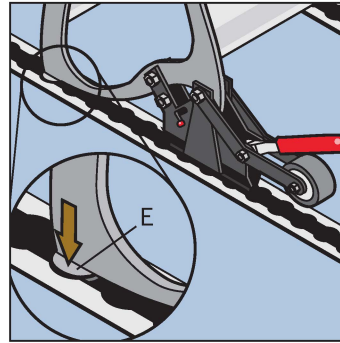

Use the round spigot E at the front of the seat legs (if available) to insert into the floor tracking holes.

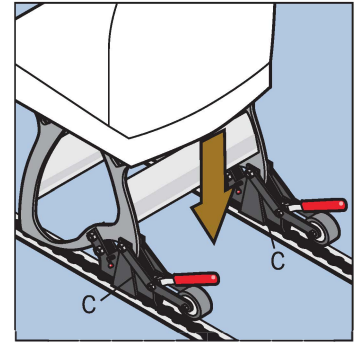


Lower the rest of the seat into the tracking. The Millennium Wheel Seat Fittings C should now sit in line with the tracking

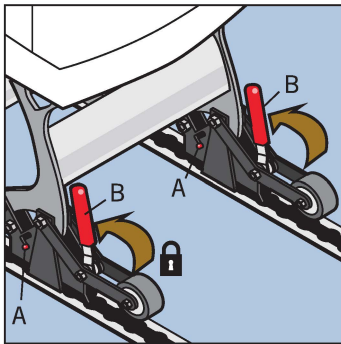


Close handles B to lock the chair in its new position. The safety bolts (A) should rest in their lower position

Unlocking seat for removal


Unlocking the seat and removing the seat

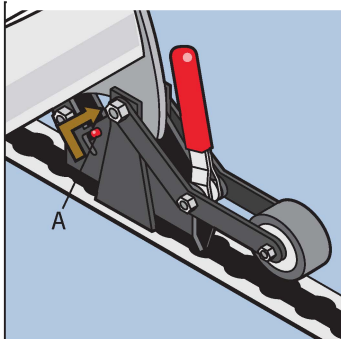

Lift safety bolt A to its upper position

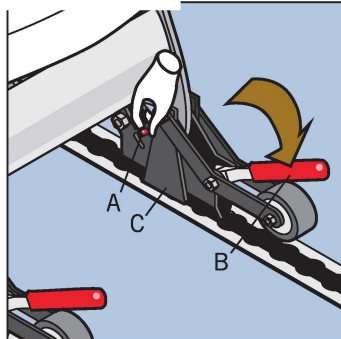

While holding safety bolt A in its upper position pull handles B away from the Millennium 2 Fitting C to unlock. Repeat on other leg. The seat is now unlocked and ready to be removed

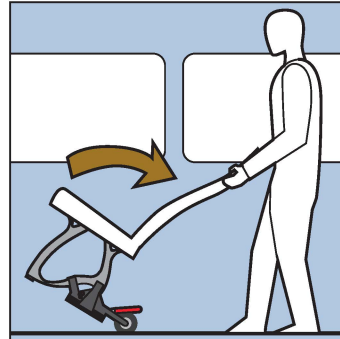

Using the wheels as a pivot point, lean the seat backwards out of the floor tracking. The seat should now be free of the tracking and can now be moved

Note: When not in the floor tracking leave the Millennium Fitting with Wheelie Wheels in the unlocked position