


# NMI Millennium 2 Seat Fitting: User Instruction Leaflet


To be operated by trained personnel only

## Installing a seat with Millennium 2 Seat Fitting


Positioning the seat, preparing the fittings, inserting them into the tracking, adjusting positioning and securing

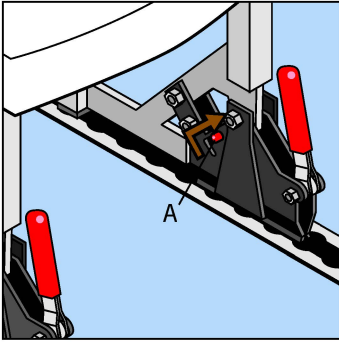


Align the seat legs resting them on the floor tracking. Lift safety bolt A to its upper position

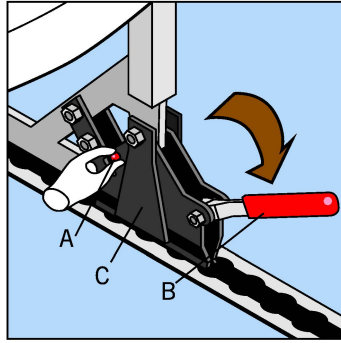


While holding safety bolt A in its upper position pull handles B away from the Millennium 2 fitting C to unlock. Repeat on other leg. The seat is now unlocked and ready to be inserted into the tracking

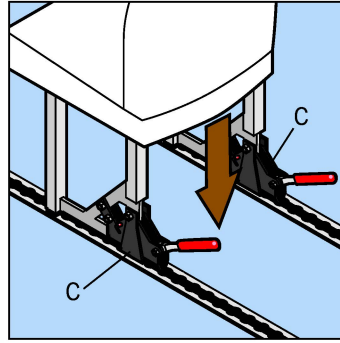

Insert the Millennium 2 Seat Fitting C into the tracking.

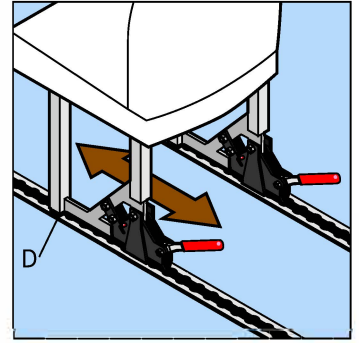

By gently tilting the seat forward onto the plastic pads D at the front of the seat, slide the seat back and forth to your preferred position\*

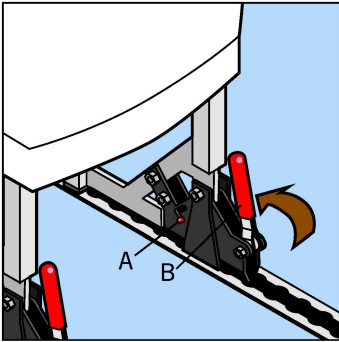


Close handles B to lock the chair in its new position. The safety bolts A should rest in their lower position. Repeat on other leg. The chair is now secure


\* Legs with front Spigot must sit in the track hole in your preferred position

## Unlocking seat for repositioning or removal


Unlocking the seat, sliding its position and resecuring the seat

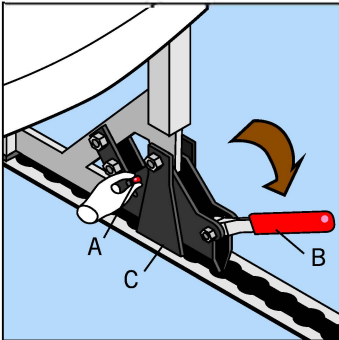

While holding safety bolt A in its upper position pull handles B away from the Millennium 2 fitting C to unlock. Repeat on other leg. The seat is now unlocked and ready to be slid in the rails or removed by lifting it out

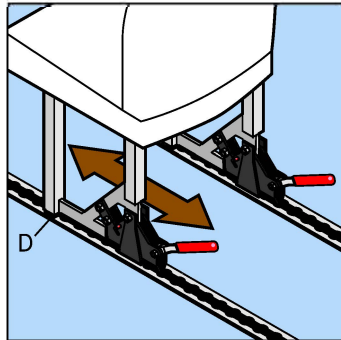

By gently tilting the seat forward onto the plastic pads D at the front of the seat, slide the seat back and forth to your preferred position. Legs with front Spigot must sit in the track hole in your preferred position

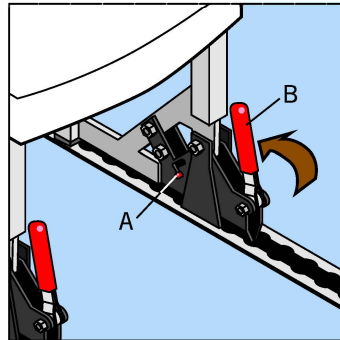

Close handles B to lock the chair in its new position. The safety bolts A should rest in their lower position

Note: When not in use in tracking leave the Millennium 2 Seat Fitting in the unlocked position